


# 4" house number installation instructions

- 1 Manually screw the blunt ends of the included screws into the back of the house number as shown in the figure.

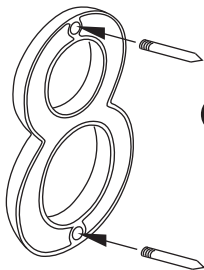

- 2 Mark the wall at the desired location using the number with attached screws as a guide.

- 3 For wood walls, drill a 3/16" pilot hole at each marked location.

For stone, concrete or stucco walls, drill a 5/16" hole to a depth of 1-1/2" at each marked location and push the included plastic anchors completely into the holes.

- 4 Manually push the number into the holes or anchors. If necessary, gently pound the number into place being careful not to damage the number surface.

Optional: Leave the screws partially out of the holes or anchors for a floating number effect.



ARCHITECTURAL  
MAILBOXES®

Made in India © 2010, Architectural Mailboxes

(800) 464-7491 [www.architecturalmailboxes.com](http://www.architecturalmailboxes.com)