





**IMPORTANT! This mailbox is intended to be mounted under an eave or another protected area.**


### Hardware (included)

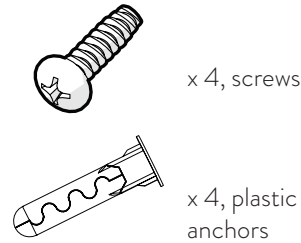

### Tools (not included)

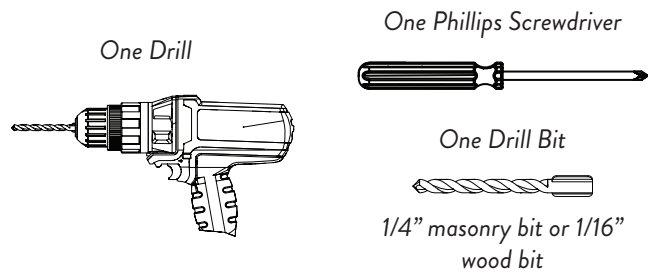


- Using the guide on the back of these instructions, mark the wall at the center of each crosshair. Use a level to ensure a straight installation (optional).

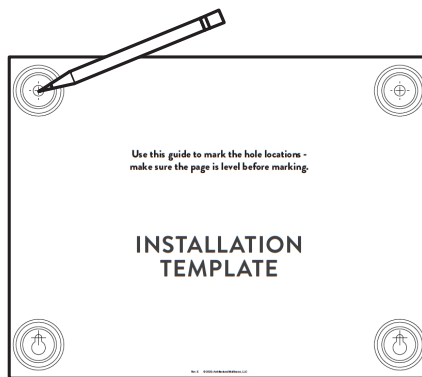

- Drill into the wall at each marked location. Use a 1/4" drill bit for brick or other masonry wall. Use a 1/16" drill bit for wood wall.

1/4" masonry bit  
- or -  
1/16" wood bit

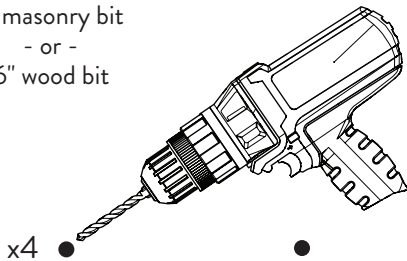

- Skip this step if installing into wood.**

Insert the included plastic anchors into the drilled holes. Gently tap them in if necessary.





- Insert the screws into the bottom two drilled holes and secure with a screwdriver. Hang the mailbox onto the secured screws using the bottom eyelet holes on the back of the mailbox.



- While the mailbox is hanging on the bottom screws, insert the remaining two screws into the top holes and secure with a screwdriver.

Questions, Comments, Concerns?


 [www.architecturalmailboxes.com](http://www.architecturalmailboxes.com)  
 [support@architecturalmailboxes.com](mailto:support@architecturalmailboxes.com)

Need keys? Visit us at...


[www.architecturalmailboxes.com/keys](http://www.architecturalmailboxes.com/keys)

Find us on social media!

    
 @archmailboxes

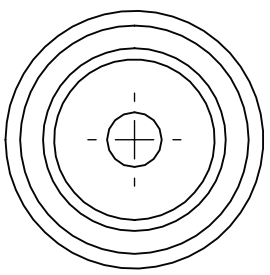

**Use this guide to mark the hole locations -  
make sure the page is level before marking.**

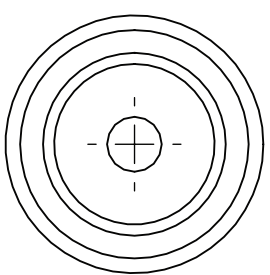

# INSTALLATION TEMPLATE

