

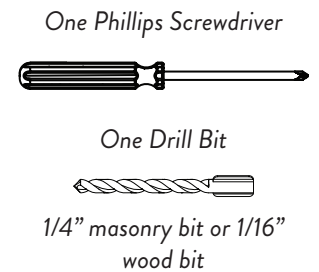


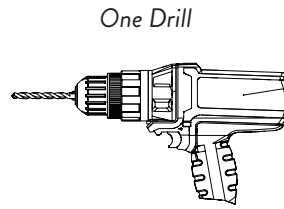


IMPORTANT! This mailbox is intended to be mounted under an eave or another protected area.

Hardware & Tools (not included)

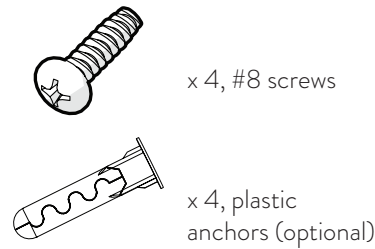


- Using the guide on the back of these instructions, mark the wall at the center of each crosshair. Use a level to ensure a straight installation (optional).

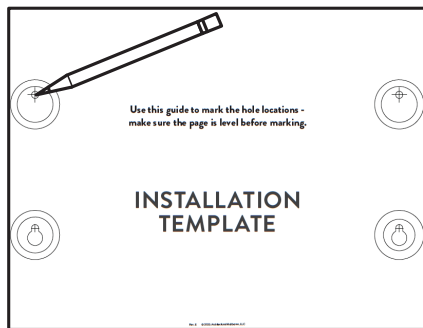

- Drill into the wall at each marked location. Use a 1/4" drill bit for brick or other masonry wall. Use a 1/16" drill bit for wood wall.


1/4" masonry bit
- or -
1/16" wood bit

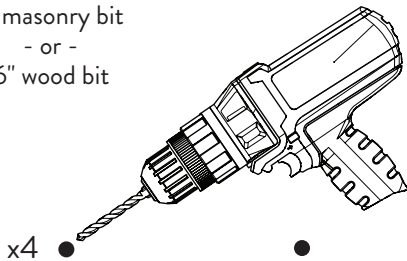

- Skip this step if installing into wood.** Insert the plastic anchors into the drilled holes. Gently tap them in if necessary.



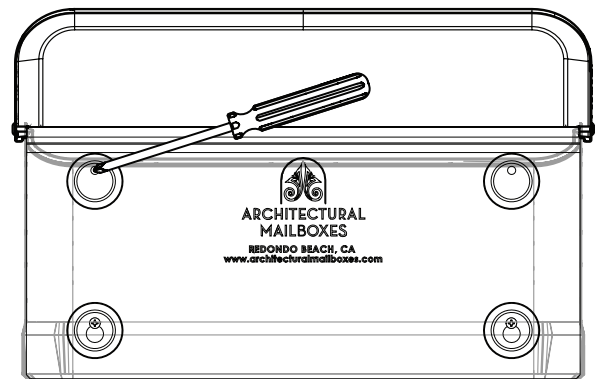

- Insert the screws into the bottom two drilled holes and secure with a screwdriver. Hang the mailbox onto the secured screws using the bottom eyelet holes on the back of the mailbox.




- While the mailbox is hanging on the bottom screws, insert the remaining two screws into the top holes and secure with a screwdriver.

Questions, Comments, Concerns?



 www.architecturalmailboxes.com
 support@architecturalmailboxes.com

Find us on social media!

  
 @archmailboxes

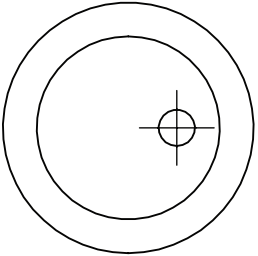

**Use this guide to mark the hole locations -
make sure the page is level before marking.**

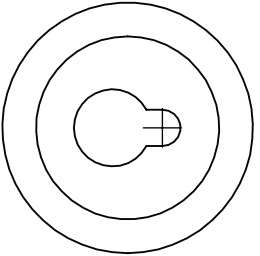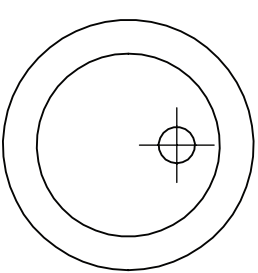

INSTALLATION TEMPLATE

