



ARCHITECTURAL  
MAILBOXES®

# Reflective Address Plaque | MBPLAQ0BAM


## ASSEMBLY INSTRUCTIONS

### Tools (not included)


One Phillips Screwdriver



One Drill

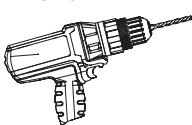

### Positioning Guide for Numbers (page 2)



## NUMBER APPLICATION INSTRUCTIONS

Instrucciones de instalación de números

- Carefully apply the self-adhesive reflective backing to the plaque surface.

*Aplicar con cuidado la parte posterior reflectora autoadhesiva a la superficie de la placa.*

- Carefully cut out the perforated oval below to use as a positioning guide.

*Con cuidado, corte el óvalo perforado que figura a continuación para usar como guía de posición.*

- Place the positioning guide on the plaque surface. If using one, three, or five numbers, lightly apply the middle number on the plaque using the center marks on the positioning guide as a reference. Add remaining numbers to the left and right or above and below. If using two or four numbers, lightly apply numbers to the left and right or above and below the center marks on the positioning guide (see fig. 1). When satisfied with number spacing, remove the guide and press numbers firmly into position.

*Coloque la guía de posición en la superficie de la placa. Si utiliza uno, tres o cinco números, ubique el numero del medio en la placa y use las marcas centrales sobre la guía de posición como referencia. Agregue los numeros restantes a la izquierda ya la derecha o arriba y abajo. Si usa dos o cuatro numeros, ubique los numeros a la izquierda ya la derecha o arriba y abajo de las marcas centrales sobre la guía de posición (ver la fig. 1). Cuando el espacio entre las numeros sea el que desea, retire la guía y presione los numeros con firmeza en la posición.*

- Repeat steps 1 and 3 on the other side of the plaque.

*Repita los pasos 1 y 3 en el reverso de la placa.*

Fig. 1



## INSTALLATION INSTRUCTIONS

Instrucciones de Instalación

- To mount to a mailbox using the provided hardware, position the number plaque in the desired location on top of the mailbox and mark holes.

*Para montar el buzón utilice el equipo suministrado, ubique la placa numérica en la posición deseada sobre el buzón y marque los orificios de perforación.*

- Drill 7/32" diameter holes and mount the plaque to the mailbox using the provided hardware and snap the cap into place (see fig. 2).

*Perfore orificios de 7/32" de diámetro y Monte la placa en el buzón con el equipo suministrado y ajuste la tapa en el lugar (vea la fig. 2).*

- Use wood screws (not provided) instead of machine screws when mounting to a post, cross arm or, other applications where a nut and bolt assembly cannot be used (see fig. 3).

*Utilice tornillos para madera (no se incluyen) en lugar de tornillos mecánicos cuando se realiza el montaje en un poste, travesano u otras aplicaciones en las que no se puede usar un conjunto de tuerca y perno (vea la fig. 3).*

Fig. 2



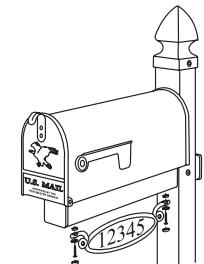


Fig. 3

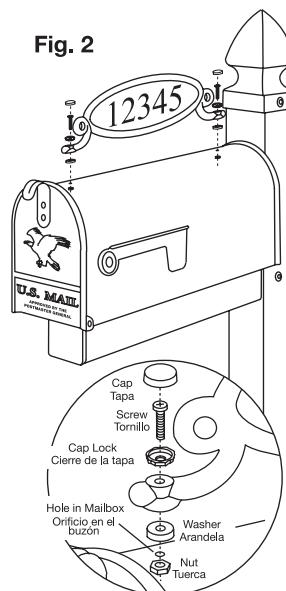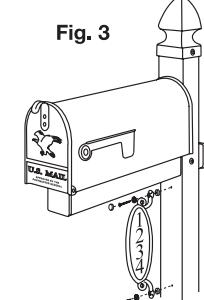

## Questions, Comments, Concerns?

[www.architecturalmailboxes.com](http://www.architecturalmailboxes.com)

[support@architecturalmailboxes.com](mailto:support@architecturalmailboxes.com)

## Find us on social media!



@archmailboxes



ARCHITECTURAL  
MAILBOXES®

Reflective Address Plaque | MBPLAQ0BAM

## POSITIONING GUIDE FOR NUMBER APPLICATION

