



4x4 Wooden Post Insert Kit

Model APK


INSTALLATION INSTRUCTIONS




IMPORTANT! Some mailbox installations are regulated by the United States Postal Service. There are often height and placement restrictions. Refer to the instructions included with the mailbox **BEFORE INSTALLING YOUR POST** to ensure proper installation. The installation instructions included on this sheet provide guidance on how to install this post insert kit only and do not cover specific mailbox installation.

Tools (not included)

Hammer
Martillo

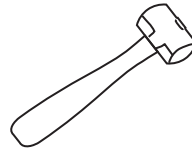

Level
Nivel

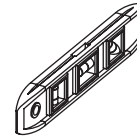


Safety Glasses
Gafas de seguridad




- 1** Position and pound anchor into the wood post.

Posición y martillo ancla en el poste de madera.



- 2** Make sure one side of the post is parallel to the street. Using a hammer, gently drive the post to ground level straightening the post as you hammer.

Asegurar un lado de poste es paralelo a la calle. Usar una martillo, suavemente martilla el poste a suelo nivel enderezando el poste como martilla.

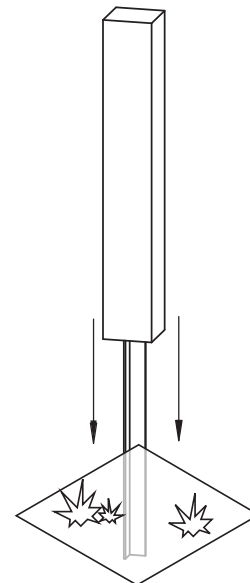

Questions, Comments, Concerns?



www.architecturalmailboxes.com



support@architecturalmailboxes.com

Find us on social media!



@archmailboxes