

Hardware (not included)

x 2, screws



x 2, plastic anchors



Tools (not included)


x 1, Phillips Screwdriver



x 1, drill bit

(1/4" masonry bit or 1/16" wood bit)

x 1, drill




IMPORTANT! This mailbox is intended to be mounted under an eave or another protected area.

¡IMPORTANTE! Este buzón está previsto para montarse bajo un alero u otra zona protegida.


- Using the guide printed on the product carton, mark the wall at the center of each crosshair. Use a level to ensure a straight installation (optional).

Utilizando la guía impresa en la caja del producto, marque la pared en el centro de cada retícula. Use un nivel para garantizar una instalación recta (opcional).



- Drill into the wall at each marked location. Use a 1/4" drill bit for brick or other masonry wall. Use a 1/16" drill bit for wood wall.

Perfore en la pared en cada punto marcado. Utilice una broca de 1/4" para el ladrillo u otra pared de mampostería. Utilice una broca de 1/16" para la pared de madera.

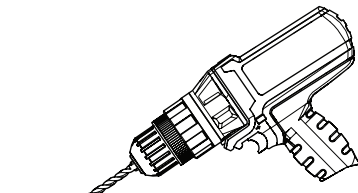


x2

1/4" masonry bit - or - 1/16" wood bit
1/4" broca de albañilería o 1/16" broca de madera

- Skip this step if installing into wood.** Insert the included plastic anchors into the drilled holes. Gently tap them in if necessary.


Omita este paso si se instala en madera.

Inserte los anclajes de plástico incluidos en los orificios perforados. Si es necesario, introdúzcalos a golpecitos con cuidado.

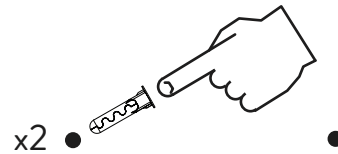

- Insert the screws into the top two drilled holes and secure with a screwdriver. Hang the mailbox onto the secured screws using the top eyelet holes on the back of the mailbox.

Introduzca los tornillos en los dos orificios superiores y fíjelos con un destornillador. Cuelgue el buzón con los tornillos fijados usando los orificios de los ojales superiores de la parte trasera del buzón.

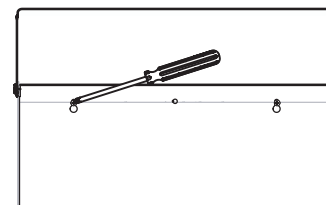

Questions, Comments, Concerns?

 www.architecturalmailboxes.com

 support@architecturalmailboxes.com

Find us on social media!



@archmailboxes