



**Tools** (not included)



**Included Hardware**

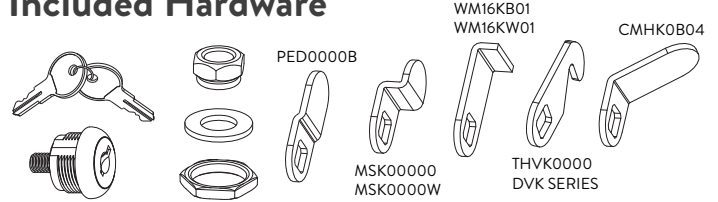


**INSTALLATION INSTRUCTIONS** *Instrucciones de Instalación*

**NOTE:** Do not tighten hex nut with key in lock.  
*NOTA: No apriete la tuerca de maleficio con llave en cerradura.*


- Using an adjustable wrench, uninstall the existing cam lock by removing the hex screw or clip. Reinstall the new lock cylinder and secure with the hex nut.

*Utilice una llave ajustable para retirar el corcho con leva existente, quitando el sujetador o el tornilla hexagonal. Vuelfa a instalar un cilindro nuevo y asegurelo con una tuerca hexagonal.*

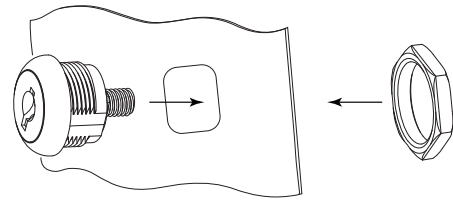



- Refer to the parts menu to select the cam that is compatible with your mailbox. Secure the cam as shown in the drawing below.

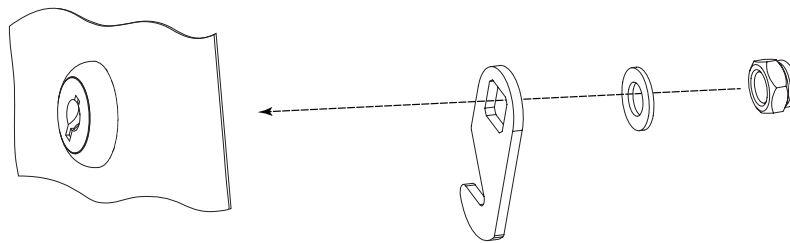*Seleccione el pestillo de proyeccion que corresponda al numero de modelo de us buzón e instalelo como se muestra.*



**Questions, Comments, Concerns?**

 [www.architecturalmailboxes.com](http://www.architecturalmailboxes.com)  
 [support@architecturalmailboxes.com](mailto:support@architecturalmailboxes.com)

**Find us on social media!**

