#### house number installation instructions

1 Manually screw the blunt ends of the included screws into the back of the house number as shown in the figure.



Mark the wall at the desired location using the number with attached screws as a guide.

For wood walls, drill a 3/16" pilot hole at each marked location.


For stone, concrete or stucco walls, drill a 5/16" hole to a depth of 1-1/2" at each marked location and push the included plastic anchors completely into the holes.

Manually push the number into the holes or anchors. If necessary, gently pound the number into place being careful not to damage the number surface.

Optional: Leave the screws partially out of the holes or anchors for a floating number effect.




Made in India © 2018, Architectural Mailboxes

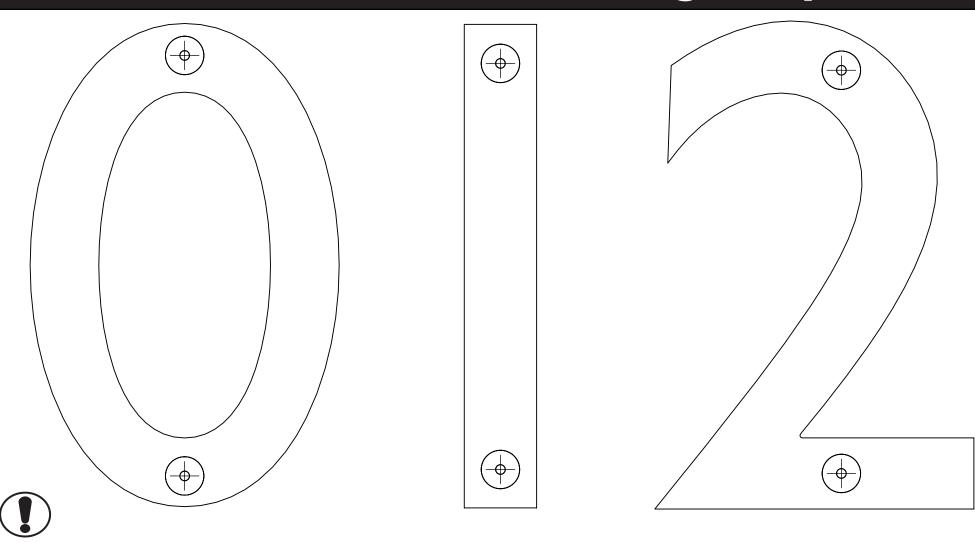

- 1. Print "Actual Size" or "Scale: 100%".

  Do not scale PDF or image size to maintain correct proportions.
- 2. The number outline may not perfectly match the physical parts since the parts are manually polished.
- 3. Cross hairs represent center of holes




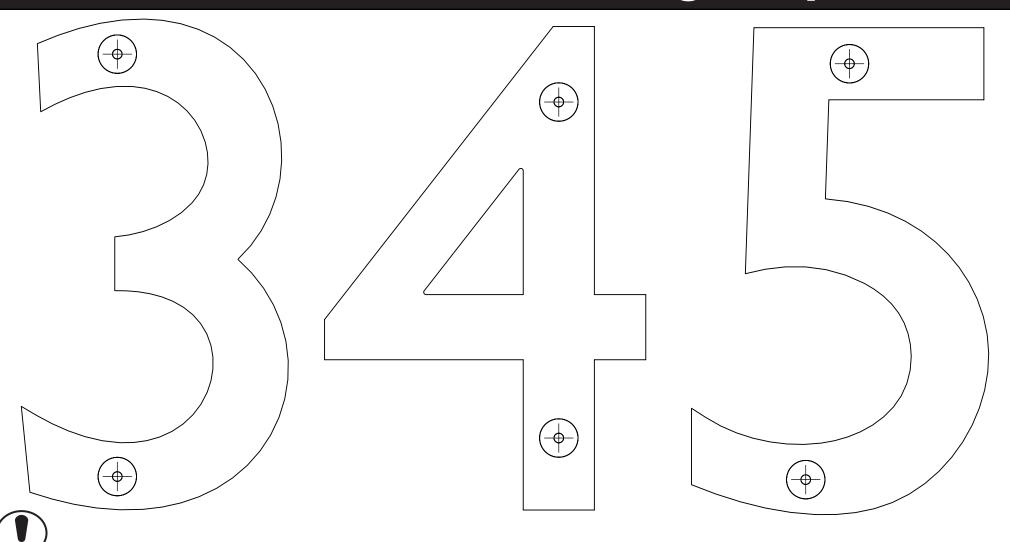


- 1. Print "Actual Size" or "Scale: 100%".

  Do not scale PDF or image size to maintain correct proportions.
- 2. The number outline may not perfectly match the physical parts since the parts are manually polished.
- 3. Cross hairs represent center of holes



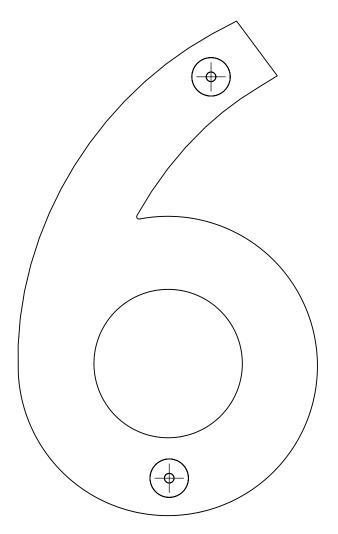

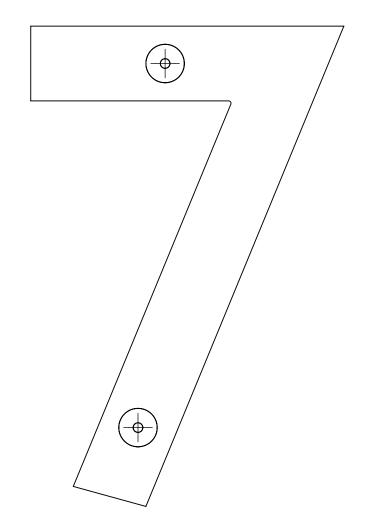





1. Print "Actual Size" or "Scale: 100%".

Do not scale PDF or image size to maintain correct proportions.

- 2. The number outline may not perfectly match the physical parts since the parts are manually polished.
- 3. Cross hairs represent center of holes



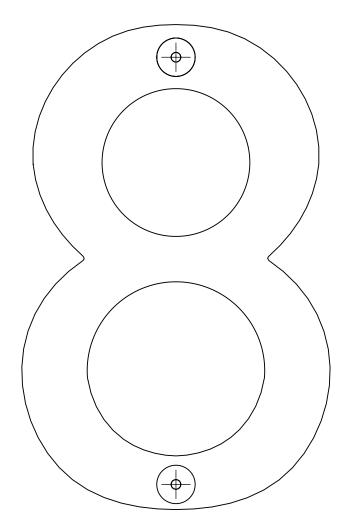

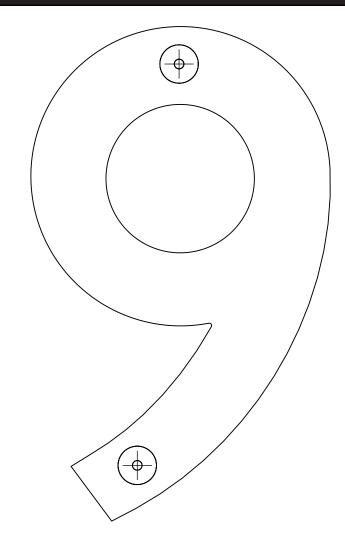



- 1. Print "Actual Size" or "Scale: 100%".

  Do not scale PDF or image size to maintain correct proportions.
- 2. The number outline may not perfectly match the physical parts since the parts are manually polished.
- 3. Cross hairs represent center of holes

